



PRODUCT USAGE AND INSTRUCTIONS

SMOOTHSIP® SLIDER

INSTRUCTIONS FOR USE:

- Wash before using.
- Lid should be disassembled prior to dishwashing.
- To do so follow these steps:
 1. Remove the lid from the bottle and push the slider to the open position.
 2. While in the open position, hold the slider in place with your thumb while pulling on the back edge to pop it out of the lid.
 3. Flip the lid over.
 4. To remove the piece underneath the lid, push it away from the spout, twist it 90 degrees, and pull it out.
 5. Remove gasket around lid.
- To put the lid back together, simply reverse these steps. The lid can be safely cleaned in the top rack of the dishwasher. The slider pieces and gasket can go in the utensil case. However, we recommend hand washing the cup to preserve its finish. Always ensure all seals and gaskets are installed and properly sealed before use.
- Avoid using harsh chemicals (such as bleach, abrasives, etc.).

WARNINGS:

- Do not microwave, freeze, or boil.
- In order to minimize bacterial growth, do not use to store warm dairy products or baby food or other perishable liquids.
- The slider on the bottle does not have a locking mechanism and is therefore leakproof only under normal conditions for the expected use of the bottle. Jostling or shaking the bottle, especially when filled with contents that create pressure within the bottle, may cause the slider to open or seal to fail.
- Always store upright and keep objects away from slider to avoid accidental opening of slider. Do not hold or store bottle upside down or on its side for extended periods of time. Always use caution when using this product with hot liquids to avoid accidental injury.
- Please note that disassembly is easy, but not intuitive, so if you're more of a visual person, scan the QR code for a video.
- Hot liquids can cause burns. Never use this product with liquids hot enough to scald.
- Not for use with carbonated beverages.